 
IFP AIR BLEED VALVES





- Removes air trapped in Hydraulic system
- Operating pressure to 5000 PSI (Non stock service)
- Facilitate pump priming at start up





Model No	Port Sizes	A	В
ABT20S	3/8" NPT	2.10	1.00

 

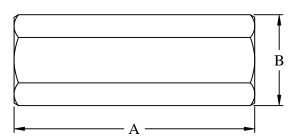

IFP Air Bleed Valves are used to remove trapped air in a hydraulic circuit or facilitate pump priming at start up when operating in a closed circuit. Unit operates by allowing air to pass at low pressure (start up) to the tank and oil flow will be closed as pressure increases.

Note:- Air Bleed should be installed as close as possible to pump outlet in a vertical position. Air Bleed return line should be terminated below oil level in the reservoir.