


LS5000 DIRECTIONAL CONTROL VALVE SERVICE PARTS INFORMATION

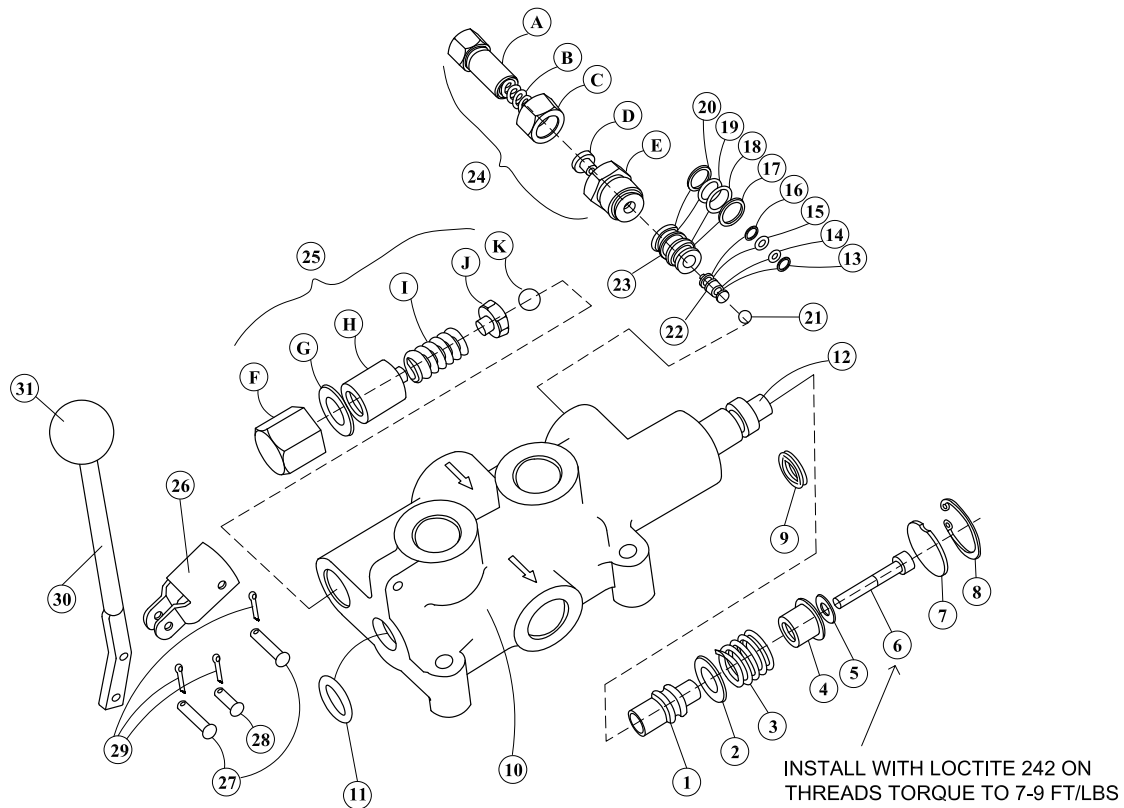

LS5000 PARTS LIST

ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	Detent sleeve	22	Piston
2	Washer	23	Piston sleeve
3	Spring	24	Detent adjusting cartridge
4	Stop cup	25	Relief kit
5	Washer	26	Link
6	Cap screw	27	Clevis pin
7	Spacer	28	Clevis pin
8	Snap ring	29	Cotter pin
9	U-cup	30	Handle
10	Valve Body	31	Knob
11	O-ring	A	Pressure Release Detent / Adjusting Screw
12	Valve spool	B	Spring
13	Back-up washer	C	Nut
14	O-ring	D	Spring Seat
15	O-ring	E	Hex Cover
16	Back-up washer	F	Acorn Nut
17	Back-up washer	G	Aluminum Washer
18	O-ring	H	Relief Adjusting Screw
19	O-ring	I	Spring
20	Back-up washer	J	Ball Seat
21	Steel ball	K	Steel Ball