

IFP IP3150/IP3300/IP3500/IP3650 BEARING CARRIERS



BEARING CARRIER PART CODE (IP3300/IP3500/IP3650 SINGLE OUTLET)

Outlet for front section.

SECTION VIEW A-A C.W. ROT.	PORT SIZE		SPLIT FLANGE		PORT SIZE		O.D.T THREAD	
	IN	OUT	BEARING CARRIER CODE C.W. ROT.	BEARING CARRIER CODE C.C.W. ROT.	IN	OUT	BEARING CARRIER CODE C.W. ROT.	BEARING CARRIER CODE C.C.W. ROT.
	2	1 1/2	HB	BH	2	1 1/2	KB	BK
	2	1 1/4	HC	CH	2	1 1/4	KC	CK
	2	1	HF	FH	2	1	KF	FK
	1 1/2	1 1/2	HL	HL	1 1/2	1 1/2	KL	LK
	1 1/2	1 1/4	HM	MH	1 1/2	1 1/4	KM	MK
	1 1/2	1	HN	NH	1 1/2	1	KN	NK
	1 1/4	1 1/4	HO	OH	1 1/4	1 1/4	KO	OK
	1 1/4	1	HP	PH	1 1/4	1	KP	PK
	1	1	HQ	QH	1	1	KQ	QK

BEARING CARRIER PART CODE (IP3150 SINGLE OUTLET)

Outlet for front section.

SECTION VIEW A-A C.W. ROT.	PORT SIZE		SPLIT FLANGE		PORT SIZE		O.D.T THREAD	
	IN	OUT	BEARING CARRIER CODE C.W. ROT.	BEARING CARRIER CODE C.C.W. ROT.	IN	OUT	BEARING CARRIER CODE C.W. ROT.	BEARING CARRIER CODE C.C.W. ROT.
	1 1/4	1 1/4	CJ	JC	1 1/2	1 1/2	KB	BK
	1 1/4	1	CL	LC	1 1/2	1 1/4	KC	CK
	1 1/4	3/4	CM	MC	1 1/2	1	KF	FK
	1 1/4	1/2	HB	BH	1 1/2	3/4	KM	MK
	1	1	HC	CH	1 1/4	1 1/4	KN	NK
	1	3/4	HF	FH	1 1/4	1	KO	OK
	1	1/2	HL	LH	1 1/4	3/4	KQ	QK
	3/4	3/4	HM	MH	1 1/4	1/2	ML	LM
	3/4	1/2	HN	NH	1	1	MN	NM
					1	3/4	MR	RM
				1	1/2	MT	TM	
				3/4	3/4	MU	UM	
				3/4	1/2	MW	WM	

BEARING CARRIER PART CODE (IP3150 DOUBLE OUTLET)

Outlets: for clockwise porting the top port number comes first;

for counter-clockwise porting the bottom port number comes first.

SECTION VIEW A-A C.W. ROT.	PORT SIZE			SPLIT FLANGE		PORT SIZE			O.D.T THREAD	
	IN	OUT	OUT	BEARING CARRIER CODE C.W. ROT.	BEARING CARRIER CODE C.C.W. ROT.	IN	OUT	OUT	BEARING CARRIER CODE C.W. ROT.	BEARING CARRIER CODE C.C.W. ROT.
	1 1/4	3/4	3/4	CA	AC	1 1/2	1	1	JG	GJ
	1 1/4	3/4	1/2	DA	AD	1 1/2	1	3/4	MG	GM
	1 1/4	1/2	1/2	EA	AE	1 1/2	3/4	3/4	NG	GN
	1	3/4	3/4	FA	AF	1 1/4	1	1	PG	GP
	1	3/4	1/2	GA	AG	1 1/4	1	3/4	SG	GS
	1 1/4	1/2	1/2	HA	AH	1 1/4	3/4	3/4	TG	GT
						1 1/4	3/4	1/2	VG	GV
						1 1/4	1/2	1/2	XG	GX
						1	1	1	YG	GY
						1	1	3/4	SC	CS