




IFP IP3100/IP5100/IP7600 BEARING CARRIERS

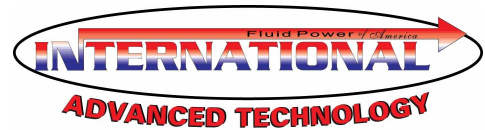

IP3100/IP5100

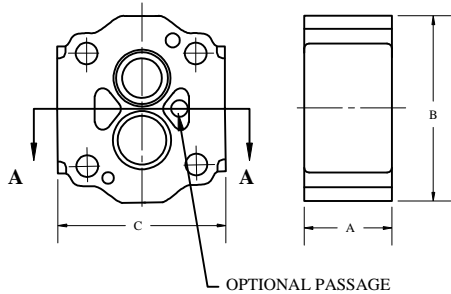

IP7600

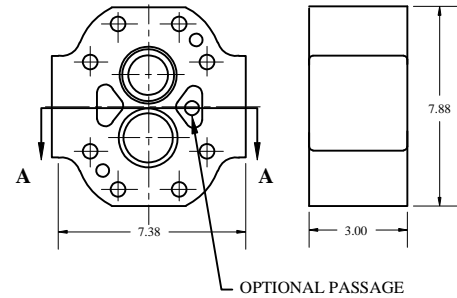

IP3100 BEARING CARRIER				IP5100 BEARING CARRIER				
PART NUMBER	"A"	"B"	"C"	PART NUMBER	"A"	"B"	"C"	DESCRIPTION
312-7700-100N	2.5	5.38	5.00	313-7700-100N	2.88	6.00	5.00	STANDARD WIDTH-"C" WITHOUT PASSAGE HOLE
312-7740-100N	2.5	5.38	5.79	313-7740-100N	2.88	6.00	5.79	WIDER WIDTH-"C" WITHOUT PASSAGE HOLE
312-7723-100N	2.5	5.38	5.00	313-7723-100N	2.88	6.00	5.00	STANDARD WIDTH-"C" WITHOUT PASSAGE HOLE
312-7743-100N	2.5	5.38	5.79	313-7743-100N	2.88	6.00	5.79	WIDER WIDTH-"C" WITHOUT PASSAGE HOLE

IP7600 BEARING CARRIER	
PART NUMBER	DESCRIPTION
316-7740-100N	WITHOUT PASSAGE HOLE
316-7740-100N	WITH PASSAGE HOLE

BEARING CARRIER PART CODE

SECTION VIEW A-A C.W. ROT.	SECTION VIEW A-A C.W. ROT.	PORT SIZE		NPT THREAD BEARING CARRIER CODE		O.D.T. THREAD BEARING CARRIER CODE		SPLIT FLANGE BEARING CARRIER CODE	
		IN	OUT	C.W. ROT.	C.C.W. ROT.	C.W. ROT.	C.C.W. ROT.	C.W. ROT.	C.C.W. ROT.
		//	//	B	B	B	B	B	B
		//	//	C	D	C	D	C	D
		1	//	TB	BT	CB	BC	LB	BL
		1 1/4	//	VB	BV	DB	BD	MB	BM
		1 1/2	//	WB	BW	FB	BF	NB	BN
		//	3/4	//	//	PJ	JP	BR	RB
		1	3/4	TX	XT	CJ	JC	LR	RL
		1 1/4	3/4	VX	XV	DJ	JD	MR	RM
		1 1/2	3/4	WX	XW	FJ	JF	NR	RN
		1 1/4	1	VZ	ZV	DK	KD	MS	SM
		1 1/2	1	WZ	ZW	FK	KF	NS	SN
		1	3/4	TJ	JT	CR	RC	LX	XL
		1 1/4	3/4	VJ	JV	DR	RD	MX	XM
		1 1/2	3/4	//	//	FR	RF	//	//
		1 1/4	1	VK	KV	DS	SD	MZ	ZM
		1 1/2	1	WK	KW	FS	SF	NZ	ZN
		//	1	//	//	HZ	ZH	//	//
		1	3/4	ZX	XZ	KJ	JK	SR	RS

SECTION A-A
ORIENTATION

BACK OF PUMP



FRONT OF PUMP

OPTIONAL PASSAGES